


Season 4
By Wavell

WAVELL 4 SIGNATURE

MANUAL | ENGLISH


Included in the box

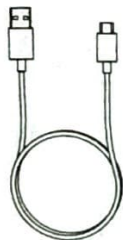


**USB-C
charging cable**



**AUX
cable**


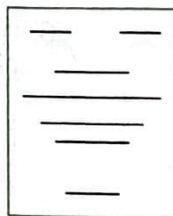


Manual

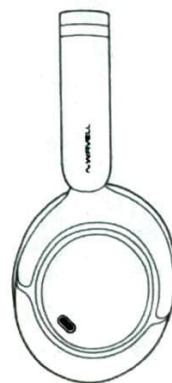

Hovedphones

Functions

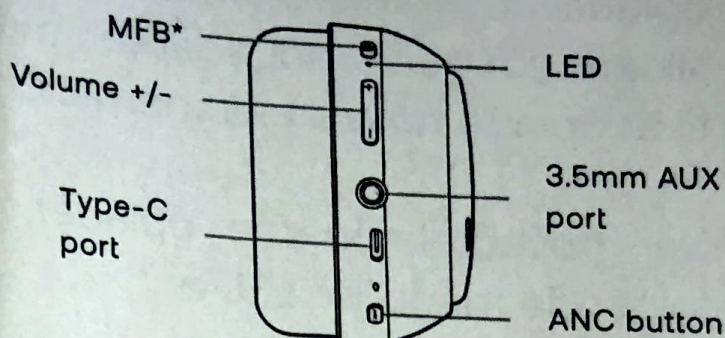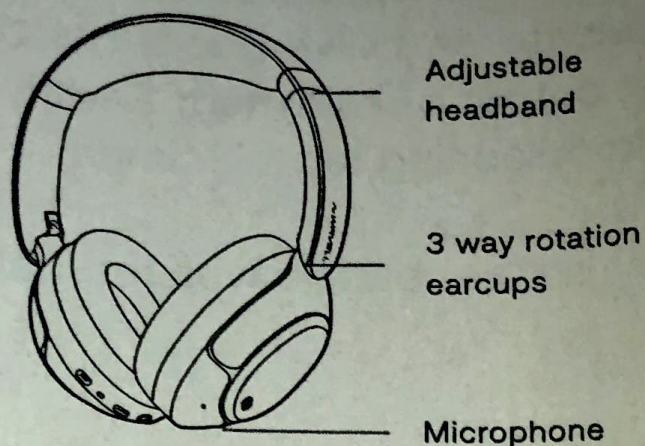

*MFB = Multifunction button

Important!

Please note that these are the standard settings. You can customize the touch settings in our "Wavell Connect" App.

- Ⓢ Power On: Hold the MFB button for 2 seconds.
- Ⓢ Power Off: Hold the MFB button for 4 seconds.
- ☎ Answer/end call: Press the MFB button.
- ☎ Ignore call: Hold the MFB button for 2 seconds.
- ⏮ Previous track: Hold the Vol - button for 1 second.
- ⏭ Next track: Hold the Vol + button for 1 second.
- ⊕ Volume up: Press Vol +.
- ⊖ Volume down: Press Vol -.
- 🎤 Pause: Press the MFB button.
- 🎵 Game/movie mode: Press the MFB button twice.
- ⌚ Voice assistant: Press the MFB button three times.
- 🔊 Switch between ANC, Normal, and Awareness modes:
Press the ANC button.

*You can activate/deactivate 'Adaptive ANC' by pressing the ANC button twice when ANC is activated.

Charging

Use the included USB-A to USB-C charging cable to charge the headphones. You can use any safety-approved adapter with an output of at least 2 watts to charge the headphones. A full charge takes 2 hours.

When charging the headphones, you can see the battery level via the LED as follows:

- Charging: Red light
- Fully charged: White light

When connected to your device, you can always check the current battery level in the 'Wavell Connect' app.

*Please fully charge the headphones before first use.

**If the headphones are left unused for more than two weeks, please fully charge them before use.

Reset to factory settings

If you experience issues with your Wavell 4 Signature, these can often be resolved with a reset.

To reset the headphones, follow these steps:

1. Remove the Bluetooth connection from your device(s).
2. Turn on the headphones.
3. Hold down the 'volume +' and 'volume -' buttons for 10 seconds until the LED flashes red 3 times.

The headphones are now restored to factory settings and ready to pair again.

Specifications

BT version: BT V5.3

Supported Codec: SBC, AAC, HIRES

Control: Buttons

Driver: 40mm

Charging time: 2 hours

Playback without ANC: 54 hours

Playback with ANC: 41 hours

Microphones: 3 with ENC

Supports low latency: Yes

Battery size: 550mAh

ANC: Yes, hybrid (50dB)

Awareness mode: Yes

App support: Yes, Wavell Connect

Do you have any questions or need translations in other languages?

Scan the QR code and find the manual in multiple languages.



Should you unexpectedly experience any issues with your product, please contact us through your local email:

info@wavell.dk

info@wavell.se

info@wavell.no

info@wavell.eu


WAVELL

© 2024. Wavell ApS. All rights reserved.

Safety

Safety Precautions

1. Please read this user manual carefully and keep it before using the product.
2. If the product is not used for an extended period (more than 2 weeks), please recharge it.
3. You must choose a charger produced by a legitimate manufacturer and certified by the national safety authority.
4. If your phone cannot detect the headphones via Bluetooth, you can either try pairing mode again or perform a factory reset on the headphones. If there is a software error on your device, turn Bluetooth off and on again or restart the device.
5. Do not disassemble or modify the battery, insert foreign objects, expose it to high temperatures, or immerse it in water or other liquids. This can prevent battery leakage, overheating, ignition, or explosion. Battery replacement should only be performed by the manufacturer.
6. Do not drop, crush, or puncture the battery. Avoid external pressure, as this may lead to internal short circuits and overheating.
7. Do not disassemble or modify the headphones for any reason, as this may result in fire, electronic breakdown, or permanent damage to the product.
8. Do not expose the product to extremely low or high temperatures (below 0°C or above 45°C).
9. Do not direct the product's indicator light towards the eyes of children or animals.
10. Do not use the product during thunderstorms, as it may cause abnormal operation and increase the risk of electric shock.
11. Do not use oil or other volatile liquids to clean the product.
12. Do not use this device for long periods at high volume, as there is a risk of hearing damage.

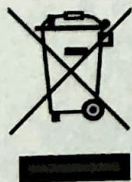

This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Get started

**Thank you for your purchase of
Wavell 4 Signature**

To get the best experience with Wavell 4 Signature, please download our app "Wavell Connect". You can download it using the QR code to the right.



Connect for the first time:

1. Take 4 Signature out of the box and hold the power button for 2 seconds.
2. Find "Wavell 4 Signature" in the bluetooth settings on your device.
3. Connect the devices.

You are now connected. 4 Signature will automatically connect to this device in the future.

Change between devices:

Wavell 4 Signature supports Multipoint.

*Multipoint in headphones allows you to connect to two devices simultaneously, such as a phone and a computer, so you can switch between them without having to reconnect. Multipoint can be toggled on/off in the app.

Activate Multipoint for the first time by doing the following:

1. Turn on the headphones and connect to device A.
2. Disable Bluetooth on device A. The headphones are now in pairing mode.
3. Connect to device B.
4. Enable Bluetooth on device A and reconnect. You are now connected to both devices.

*Please note that the headphones will automatically connect to both devices in the future.